Section 4.3

Main System Overview

The Main System Overview in the Uponor Configuration Tool (UCT) software (A9090000) allows a user to see the status of all Network System output and sensor readings from a single screen. The screen can be very useful when troubleshooting a system.

This section explains how to access the Main System Overview screen.

Before proceeding, make sure the following steps are complete.

- ☐ All UCT software components are installed (Section 1.5).
- ☐ The computer is correctly connected to the Network System (Section 1.6).

Accessing the Main System Overview

Refer to the following steps to access the Main System Overview screen.

1. From the Main Menu, click the General Maintenance button shown in Figure 4.3-1. This displays the Maintenance screen shown in Figure 4.3-2.

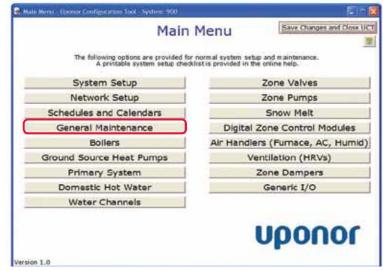


Figure 4.3-1: Main Menu Screen

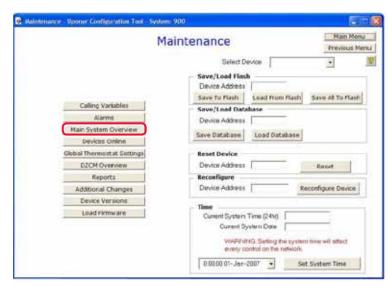


Figure 4.3-2: Maintenance Screen

 From the Maintenance screen, click the Main System Overview button to open the screen shown in Figure 4.3-3. In this example, the Network System includes a Router Main Control (RTR), Primary Equipment Control (PEC), a Supply Water Temperature Control (SWT) and one Digital Zone Control Module (DZCM).

Note: The Main System Overview screen may take several minutes to load while the entire Network System is scanned.

All gray tiles on the Main System Overview screen are active buttons. Clicking on a button takes the user to the UCT screen for the corresponding control or device.

Note: Not all sections of the Main System Overview screen will be populated. The screen is arranged to show data for the maximum number of controls supported in a single installation of the Network System. However, it only displays data for detected devices. For example, if only DZCM1 is connected to the system, the grid of information will show all 12 potential DZCMs, but actuator statuses will display for DZCM1 only.

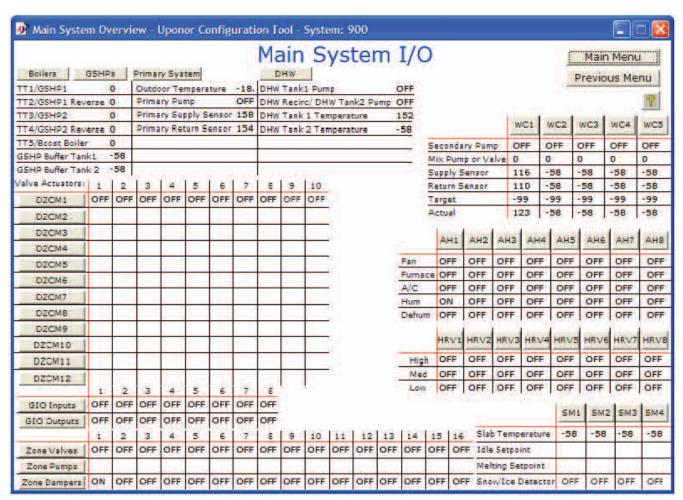


Figure 4.3-3: Main System Overview Screen

UDONO www.uponorpro.com