

Compact Select Uncoiler Instructions

Uponor

The Uponor Compact Select Uncoiler, part number E6063000, facilitates the uncoiling of $\frac{3}{8}$ " to 1" Uponor PEX or multi-layer composite tubing (formerly MultiCor®). The Compact Select Uncoiler comes in a heavy-duty, yet portable, case for easy transport.

Note: Failure to read and follow instructions may result in personal injury or damage to equipment.

Getting Ready

Follow the steps below prior to using the Compact Select Uncoiler.

1. Check the contents of this package. If any contents are missing or damaged, please

contact your Uponor sales representative or distributor for assistance.

2. Inspect the uncoiler for damage or missing parts before each use. Do not use the uncoiler with damaged or missing parts.
3. Check all parts to ensure they are in good condition.
4. Never repair a damaged uncoiler. If damage occurs, contact Uponor Technical Services at (888) 594-7726 for information about repairing the uncoiler.

Proper Setup and Use

Follow the instructions below to properly set up and use the Compact Select Uncoiler.

1. Read all labels.
2. Only use the uncoiler on a level, flat surface.
3. Do not use the uncoiler if you are not in good physical condition.
4. Do not use the uncoiler in front of unlocked doors.
5. Use extreme care when using the uncoiler on slippery surfaces or in wet or icy conditions.
6. Do not place anything under the uncoiler to gain height or to adjust uneven surfaces.


7. Ensure the uncoiler is firmly supported to prevent excessive movement.
8. Use extreme care placing items on the uncoiler.
9. Never climb, stand or sit on the uncoiler.
10. Use extra caution when using the uncoiler in windy conditions.

Proper Care and Storage

Follow the steps below to properly care for and store the Compact Select Uncoiler.

1. Keep the uncoiler clean of all foreign materials.
2. Do not store materials on the uncoiler.
3. Only use the uncoiler for which it was intended. Do not misuse or abuse the uncoiler.

Assembly — Refer to the following instructions to properly assemble the Compact Select Uncoiler.

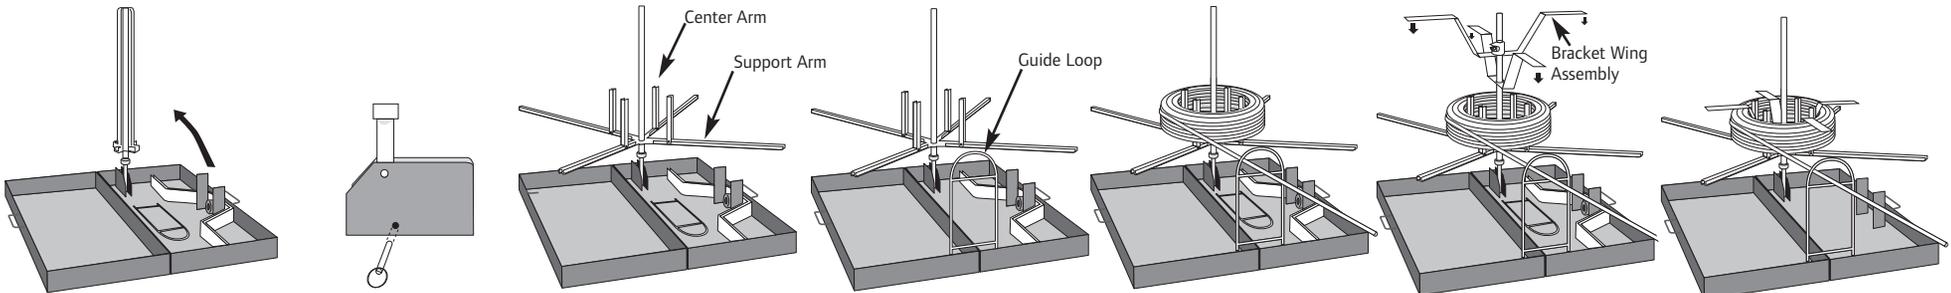

1. Lay the case open and raise the main tower shaft assembly.
2. Insert the pin in the tower base to hold it upright.
3. With the longer support arms in the down position, raise the shorter center arms.
4. Take the guide loop and place it in the receptacle at the end of the case, and secure the guide loop with pins.
5. Place a coil of Uponor PEX or multi-layer composite tubing on the rack and pull the end through the top of the guide loop.
6. Take the bracket wing assembly and place it on the main tower shaft over the coil with the clamp wing on top.
7. Ensure the two brackets are in a cross position with the clamp wing on top.

The uncoiler is now ready to unroll the coil of tubing.

Uponor, Inc.
5925 148th Street West
Apple Valley, MN 55124
Tel: (800) 321-4739
Fax: (952) 891-1409
Web: www.uponor-usa.com
E-mail: learnmore@uponor-usa.com

Uponor Ltd.
655 Park Street
Regina, SK S4N 5N1
Tel (888) 994-7726
Fax (800) 638-9517
Web: www.uponor.ca
E-mail: info@uponor.ca



Caution: Do not overload. The Compact Select Uncoiler is designed for a maximum load of 500 feet of 1" Uponor PEX or multi-layer composite tubing, 750 feet of $\frac{3}{4}$ " tubing or 1,000 feet of $\frac{1}{2}$ " tubing.



Warning: Metal conducts electricity. Use care when using the uncoiler near power lines and electrical circuits.